


(815) 229-3292 f: (815) 229-7082 2135 15th St. Box 6106 Rockford, IL 61125

www.SkyBracket.com

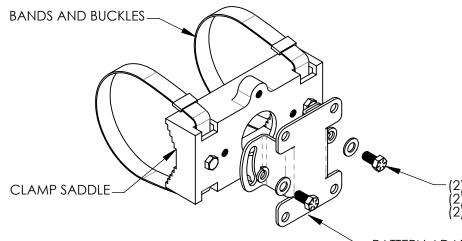

TORQUE CHART	
FASTENER SIZE	TORQUE
5/16"	10 FT-LBS
3/8"	15 FT-LBS
1/2"	15 FT-LBS

3/8-16 BOLT

3/8 FLAT WASHER 3/8 SPLIT LOCK WASHER

PATTERN ADAPTER

Installation Instructions ISM Band Style Clamp

Preparation:

Read and understand these instructions prior to beginning.

Review installation instructions provided by sign manufacturer. Verify mounting location and method is acceptable.

Check parts against the installation drawing accompanying these instructions, verify all necessary components are present and undamaged.

Review tools required to perform the installation, ensure all tools are present and in good working order prior to beginning the installation process.

Safety first! Review and adhere to all applicable work zone safety information to ensure installer safety.

Installation:

Determine mounting location - When determining the mounting location careful thought must be given to ensure access to tensioning components, adjustment screws and electrical connections.

Mount saddle bracket - With bracket in desired position, tighten banding with an approved banding tool (information may be found at www.band-it-idex.com). Tighten until bands prevent clamp weight from repositioning the assembly. Tighten the 2 pressure screws as needed to add additional tension to banding. Banding must be tight enough to ensure mounting bracket does not shift or slip under load.

Trim bands – Cut off excess banding material, use caution as trimmed edges of banding may be sharp after trimming.

Mount adaptor forming - considering the desired finished location of the sign, install the adaptor plate to the mounting points provided by the sign manufacturer hand tighten only.

Install sign & adaptor forming to saddle - Position the assembly from previous step on the face of saddle, bolt the assembly in place with the supplied 3/8" hardware hand tighten only.

Tighten mounting hardware - After leveling and adjusting the position of the sign securely tighten all fasteners. 5/16" hardware to be torque to 10 ft lbs, 3/8" hardware to be torqued to 15 ft lbs, ½" hardware to be torqued to 20 ft lbs.

Inspection:

Review installation – Verify all hardware is tightened to proper specifications.

Form 1019-03 REV 10/2019